

Model CHEC — 8.0 K-factor Concealed Horizontal Extended Coverage Quick Response Light Hazard, Sidewall Sprinklers

General Description

The 8.0 K-factor, Model CHEC (Concealed Horizontal Extended Coverage), Quick Response Light Hazard, Sidewall Sprinklers are decorative, 3 mm bulb type sprinklers featuring a unique cover plate designed to conceal the sprinkler. It is the best choice for architecturally sensitive areas such as dormitories, hotel rooms, reception areas, office buildings, banquet facilities, conference rooms, and hospitals.

The soft contour of the cover plate optimizes a low profile while blending in with surrounding surfaces. The plate, while maintaining a fast response sensitivity has been specifically designed without vent holes to increase its aesthetic appeal while helping to avoid objects from being hung from the sprinkler (i.e., garment bags, clothes hangers, etc.) that might otherwise cause an inadvertent operation.

They are designed for installation along a wall or the side of a beam and beneath a smooth and level ceiling. Horizontal sidewall sprinklers are commonly used in lieu of pendent or upright sprinklers because of aesthetics or building construction considerations where piping across the ceiling is not desirable.

IMPORTANT

Always refer to Technical Data Sheet TFP700 for the "INSTALLER WARNING" that provides cautions with respect to handling and installation of sprinkler systems and components. Improper handling and installation can permanently damage a sprinkler system or its components and cause the sprinkler to fail to operate in a fire situation or cause it to operate prematurely.

They are intended for use in automatic sprinkler systems designed in accordance with standard installation rules (e.g., NFPA 13) for light hazard occupancies. The fast response thermal sensitivity rating of the Model CHEC Sprinklers provides for a quick response extended coverage rating up to a 16 ft. x 22 ft. coverage area.

Each unit includes a Cover Plate Assembly that conceals the sprinkler operating components. The separable two-piece design of the Cover Plate and Support Cup Assemblies allows installation of the sprinklers and pressure testing of the fire protection system prior to the installation of the wall or application of a finish coating.

Also, the separable "push-on and thread-off" two-piece design of the Sprinkler provides for 1/2 inch (12,7 mm) of horizontal adjustment.

The Model CHEC Sprinklers are shipped with a Protective Cap. The Protective Cap is temporarily removed for installation, and it must be replaced to help protect the sprinkler while the wall is being plastered, wallpapered, or painted. When the wall installation is complete the Protective Cap must be removed and the Cover Plate Assembly installed. The Protective Cap must be removed to ensure proper performance of the sprinklers.

WARNINGS

The Model CHEC (Concealed Horizontal Extended Coverage), Quick Response Light Hazard, Sidewall Sprinklers described herein must be installed and maintained in compliance with this document, as well as with the applicable standards of the National Fire Protection Association, in addition to the standards of any other authorities having jurisdiction. Failure to do so may impair the performance of these devices.


The owner is responsible for maintaining their fire protection system and de-



vices in proper operating condition. The installing contractor or sprinkler manufacturer should be contacted with any questions.

Sprinkler Identification Number

TY4332 - ECLH HSW, 8.0K, 3/4"NPT

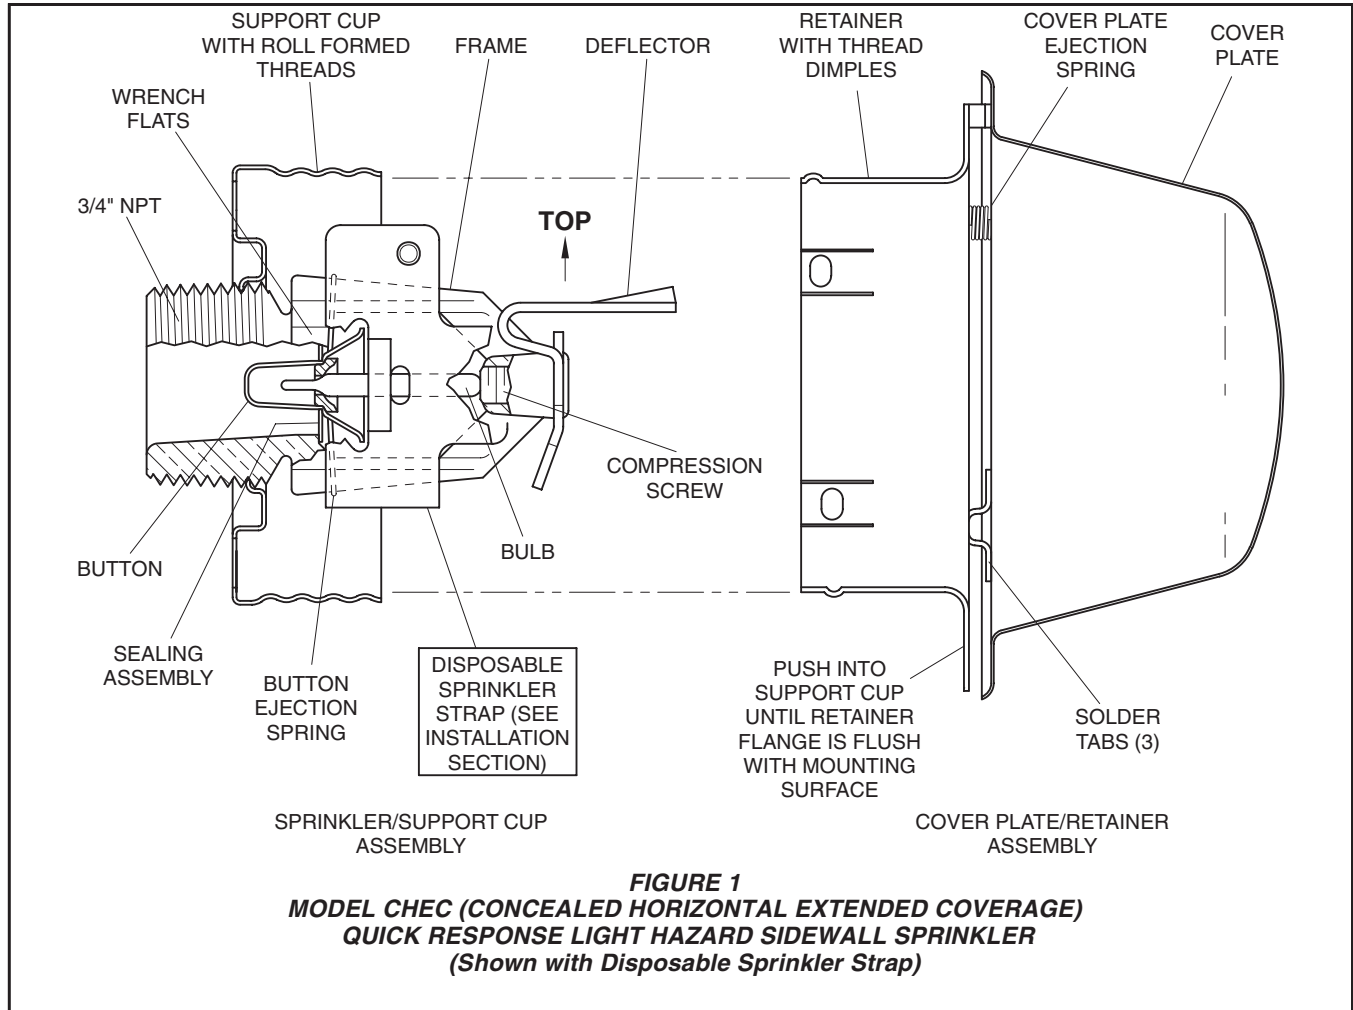

Technical Data

Approvals

UL and C-UL Listed. NYC Approved under MEA 177-03-E. (The listings apply only to the service conditions indicated in the Design Criteria section.)

Maximum Working Pressure

175 psi (12,1 bar)

Discharge Coefficient

$K = 8.0 \text{ GPM/psi}^{1/2}$ (115,2 LPM/bar^{1/2})

Temperature Ratings

135°F/57°C Sprinkler with 135°F/57°C Cover Plate

155°F/68°C Sprinkler with 135°F/57°C Cover Plate

Adjustment

1/2 inch (12,7 mm)

Finish

Cover Plate: Bright White or Chrome Plated. (Custom colors other than white are available on special request.)

Physical Characteristics

Frame	Bronze
Button	Bronze/Copper
Button Spring	Stainless Steel
Sealing Assembly Beryllium Nickel w/Teflon†
Bulb, 3 mm Diameter	Glass
Deflector	Brass
Compression Screw	Bronze
Support Cup	Steel
Retainer	Brass
Cover Plate	Brass
Cover Plate Ejection Spring Stainless Steel


Patents

Patents are pending.

Operation

When exposed to heat from a fire, the Cover Plate, which is soldered to the Retainer at three points, falls away to expose the Sprinkler Assembly.

The glass bulb contains a fluid that expands when exposed to heat. When the rated temperature is reached, the fluid expands sufficiently to shatter the glass bulb, activating the sprinkler and allowing water to flow.

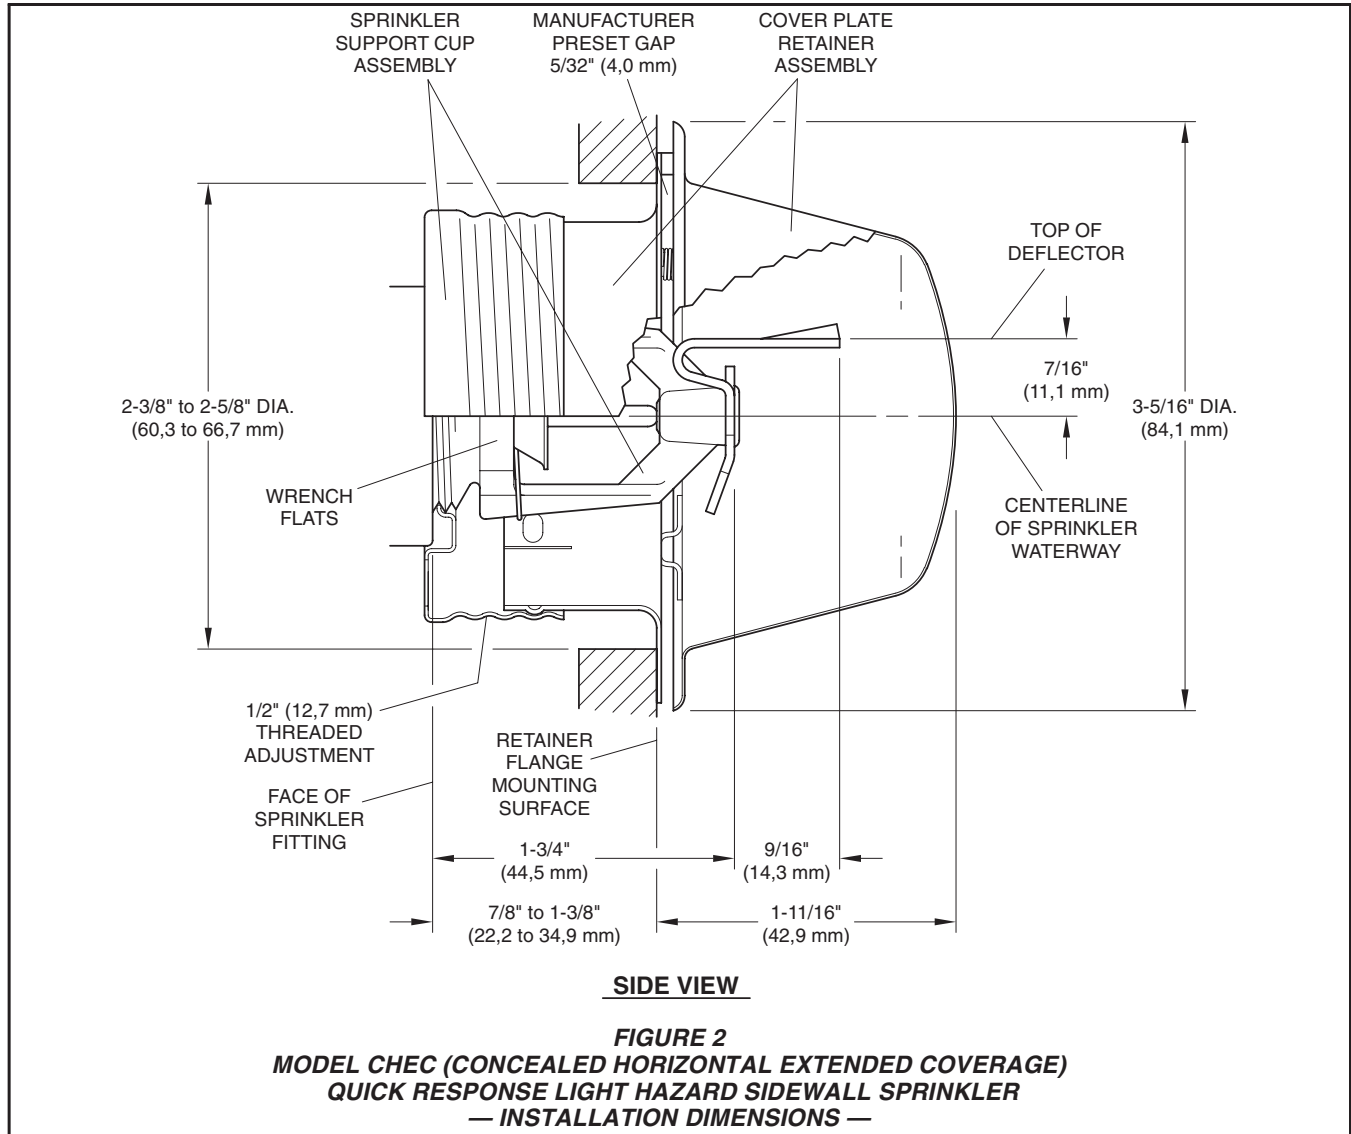

Design Criteria

The Model CHEC Sprinklers are UL and C-UL Listed for use in light hazard occupancies, using the design criteria in Table A, in addition to the requirements specified in the current NFPA 13 for extended coverage sidewall sprinklers.

The Model CHEC Sprinklers are only listed and approved with the Model CHEC Cover Plates having a factory applied finish.

Installation

The Model CHEC Sprinklers must be installed in accordance with the following instructions:

NOTES

Do not install any bulb type sprinkler if the bulb is cracked or there is a loss of liquid from the bulb. With the sprinkler held horizontally, a small air bubble should be present. The diameter of the air bubble is approximately 1/16 inch (1,6 mm).

A leak tight 3/4 inch NPT sprinkler joint should be obtained with a torque of 10 to 20 ft.lbs. (13,4 to 26,8 Nm). A maximum of 30 ft.lbs. (40,7 Nm) of torque is to be used to install sprinklers with 3/4 NPT connections. Higher levels of torque may distort the sprinkler inlet with consequent leakage or impairment of the sprinkler.

Do not attempt to compensate for insufficient adjustment in the Sprinkler Assembly by under- or over-tightening the Sprinkler/Support Cup Assembly. Readjust the position of the sprinkler fitting to suit.

Step 1. The sprinkler must only be installed with its centerline perpendicular to the back wall and parallel to the ceiling. The word "TOP" on the deflector is to face towards the ceiling.

Step 2. Remove the Protective Cap.

NOTE

Do not remove the Sprinkler Strap (Fig. 1) until the sprinkler system is to be placed in service.

Step 3. With pipe thread sealant applied to the pipe threads, hand tighten the sprinkler into the sprinkler fitting.

Step 4. Wrench tighten the sprinkler using only the W-Type 7 Wrench (Ref.

Response Rating	Coverage Area ⁽¹⁾ , Ft. x Ft. (m x m)	Minimum Flow ⁽²⁾ , GPM (LPM)	Minimum Pressure ⁽²⁾ , PSI (BAR)	Deflector-To-Ceiling Distance ⁽³⁾ , In. (mm)	Sprinkler Temperature Rating, °F	Lateral Minimum Spacing ⁽⁴⁾ , Ft. (m)
Quick	16 x 14 (4,9 x 4,3)	26 (98)	10.6 (0,73)	4 to 12 (100 to 300)	135 or 155	10 (3,1)
Quick	16 x 16 (4,9 x 4,9)	26 (98)	10.6 (0,73)	4 to 12 (100 to 300)	135 or 155	10 (3,1)
Quick	16 x 18 (4,9 x 5,5)	29 (110)	13.1 (0,90)	4 to 12 (100 to 300)	135	10 (3,1)
Quick	16 x 20 (4,9 x 6,1)	36 (136)	20.3 (1,40)	4 to 12 (100 to 300)	135	10 (3,1)
Quick	16 x 22 (4,9 x 6,7)	36 (136)	20.3 (1,40)	4 to 12 (100 to 300)	135	10 (3,1)

NOTES

1. Backwall (where sprinkler is located) by sidewall (length of throw).
2. Requirement is based on minimum flow in GPM from each sprinkler. The indicated residual pressures are based on the nominal K-factor.
3. The centerline of the sprinkler waterway is located 7/16 inch (11,1 mm) below the deflector (Ref. Figure 2).
4. Minimum spacing is for lateral distance between sprinklers located along a single wall. Otherwise adjacent sprinklers (i.e., sidewall sprinklers on an adjacent wall, on an opposite wall, or pendent sprinklers) must be located outside of the maximum listed protection area of the extended coverage sidewall sprinkler being utilized.

TABLE A
UL AND C-UL LISTING COVERAGE AND FLOW RATE CRITERIA

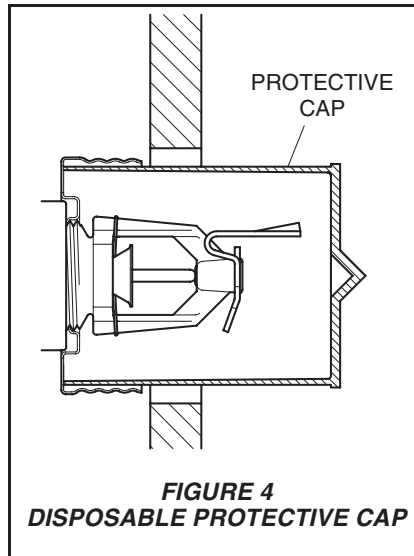
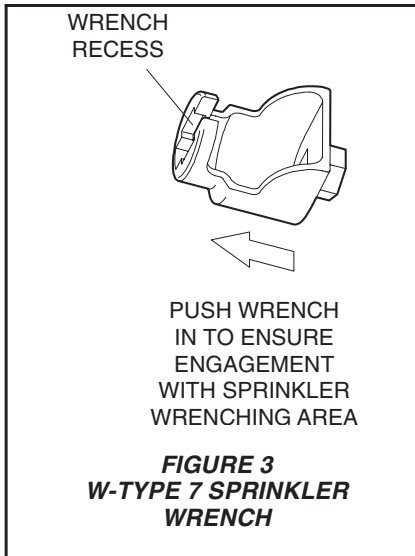


Figure 3). The wrench recess of the W-Type 7 Wrench is to be applied to the Sprinkler Wrench Flats shown in Figures 1 and 2.

Step 5. Replace the Protective Cap (Ref. Figure 4) by pushing it inwards until it bottoms out against the Support Cup. The Protective Cap helps prevent damage to the Sprinkler to help protect the sprinkler while the wall is being plastered, wallpapered, or painted.

NOTE
As long as the Sprinkler Strap (Fig. 1) or the Protective Cap (Fig. 4) remains in place, the system is considered to be "Out of Service".

Step 6. After the wall has been completed with the nominal 2-1/2 inch (63,5 mm) diameter mounting hole and in preparation for installing the Cover Plate Assembly, remove and discard the Protective Cap and the Sprinkler Strap. If the Sprinkler has been damaged in any way including accidental over spray from finishing the wall, replace the entire Sprinkler/Support Cup Assembly.

NOTE
Refer to Technical Data Sheet TFP700 regarding instructions for the removal of the Sprinkler Strap.

Step 7. Push the Cover Plate/Retainer Assembly into the Support Cup, and as necessary, make the final adjustment of the Cover Plate with re-

spect to the wall by turning the Cover Plate/Retainer Assembly clockwise until its flange just comes in contact with the wall.

If it becomes necessary to remove the Cover Plate, it can be removed by unscrewing in a counter-clockwise direction.

If the Cover Plate/Retainer Assembly cannot be engaged with the Support Cup or the Cover Plate/Retainer Assembly cannot be engaged sufficiently to contact the wall, the Sprinkler Fitting must be repositioned.

Care and Maintenance

The Model CHEC Sprinklers must be maintained and serviced in accordance with the following instructions:

NOTES

When properly installed, there is a nominal 5/32 inch (4,0 mm) air gap between the lip of the Cover Plate and the ceiling, as shown in Figure 2. This air gap is necessary for proper operation of the sprinkler. If the wall is to be repainted after the installation of the Sprinkler, care must be exercised to ensure that the new paint does NOT seal off any of the air gap.

Factory painted Cover Plates MUST NOT be repainted. They should be replaced, if necessary, by factory painted units.

Do not pull the Cover Plate relative to the Enclosure. Separation may result.

Before closing a fire protection system main control valve for maintenance work on the fire protection system that it controls, permission to shut down the affected fire protection system must be obtained from the proper authorities and all personnel who may be affected by this action must be notified.

Sprinklers that are found to be leaking or exhibiting visible signs of corrosion must be replaced.

Automatic sprinklers must never be painted, plated, coated or otherwise altered after leaving the factory. Modified sprinklers must be replaced. Sprinklers that have been exposed to corrosive products of combustion, but have not operated, should be replaced if they cannot be completely cleaned by wiping the sprinkler with a cloth or by brushing it with a soft bristle brush.

Care must be exercised to avoid damage to the sprinklers - before, during, and after installation. Sprinklers damaged by dropping, striking, wrench twist/slippage, or the like, must be re-

placed. Also, replace any sprinkler that has a cracked bulb or that has lost liquid from its bulb. (Ref. Installation Section).

If a sprinkler must be removed, do not reinstall it or a replacement without reinstalling the Cover Plate Assembly. If a Cover Plate Assembly becomes dislodged during service, replace it immediately.

The owner is responsible for the inspection, testing, and maintenance of their fire protection system and devices in compliance with this document, as well as with the applicable standards of the National Fire Protection Association (e.g., NFPA 25), in addition to the standards of any other authorities having jurisdiction. The installing contractor or sprinkler manufacturer should be contacted relative to any questions.

It is recommended that automatic sprinkler systems be inspected, tested, and maintained by a qualified Inspection Service in accordance with local requirements and/or national codes.

Limited Warranty

Products manufactured by Tyco Fire Products are warranted solely to the original Buyer for ten (10) years against defects in material and workmanship when paid for and properly installed and maintained under normal use and service. This warranty will expire ten (10) years from date of shipment by Tyco Fire Products. No warranty is given for products or components manufactured by companies not affiliated by ownership with Tyco Fire Products or for products and components which have been subject to misuse, improper installation, corrosion, or which have not been installed, maintained, modified or repaired in accordance with applicable Standards of the National Fire Protection Association, and/or the standards of any other Authorities Having Jurisdiction. Materials found by Tyco Fire Products to be defective shall be either repaired or replaced, at Tyco Fire Products' sole option. Tyco Fire Products neither assumes, nor authorizes any person to assume for it, any other obligation in connection with the sale of products or parts of products. Tyco Fire Products shall not be responsible for sprinkler system design errors or inaccurate or incomplete information supplied by Buyer or Buyer's representatives.

IN NO EVENT SHALL TYCO FIRE PRODUCTS BE LIABLE, IN CON-

TRACT, TORT, STRICT LIABILITY OR UNDER ANY OTHER LEGAL THEORY, FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LABOR CHARGES, REGARDLESS OF WHETHER TYCO FIRE PRODUCTS WAS INFORMED ABOUT THE POSSIBILITY OF SUCH DAMAGES, AND IN NO EVENT SHALL TYCO FIRE PRODUCTS' LIABILITY EXCEED AN AMOUNT EQUAL TO THE SALES PRICE.

THE FOREGOING WARRANTY IS MADE IN LIEU OF ANY AND ALL OTHER WARRANTIES EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Ordering Procedure

When placing an order, indicate the full product name. Contact your local distributor for availability.

Sprinkler Assembly:

Specify: (Specify temperature), Model CHEC Sidewall Sprinkler, P/N (specify).

135°F/57°C P/N 51-396-1-135
155°F/68°C P/N 51-396-1-155

Separately Ordered Cover Plate:

Specify: 135°F/57°C Model CHEC Cover Plate Assembly with Specify Finish, P/N (specify).

Bright White..... P/N 56-396-4-135
Chrome P/N 56-396-9-135
White (RAL 9010)* P/N 56-396-3-135
Custom P/N 56-396-X-135

* Eastern Hemisphere sales only.

Sprinkler Wrench:

Specify: W-Type 7 Sprinkler Wrench, P/N 56-850-4-001.

